



## **B8 5112/5162 LEVELING KIT (FRONT) 2013+ RAM 3500 4x4 DIESEL / 2014+ RAM 2500 4x4 DIESEL**

### **IMPORTANT! READ THIS FIRST!**

Installation of shock absorbers requires special tools and expert knowledge. Accordingly, installation of all BILSTEIN products must be performed by a qualified suspension specialist.

When replacing other brands, BILSTEIN shock absorbers should always be installed as a set. All BILSTEIN products must only be used for the specific, intended application as indicated in the application guide. **Any use of any BILSTEIN product other than for its intended use may result in serious bodily injury or death.**

Always use a chassis hoist for the installation of BILSTEIN products and make certain that the raised vehicle is securely attached to the hoist and/or supported to prevent the vehicle from slipping, falling, or moving during the installation process.

**If you choose to install any BILSTEIN product without the necessary special tools, expertise or chassis hoist, you may subject yourself to the risk of serious bodily injury or death.** If you elect not to use a chassis hoist, at least make sure the vehicle is on level ground, that all tires on the ground during installation are blocked to prevent movement, that at least two tires are on the ground at all times, and that adequately secured safety stands (jack stands) are used to support the chassis. **NEVER** get under the vehicle until you have checked to make sure all of these steps are performed.

BILSTEIN suspension products are gas-filled and are highly pressurized.

- Never place any BILSTEIN product in a vise or use a clamp on any BILSTEIN product.
- Never apply heat near any BILSTEIN product.
- Never attempt to open or repair any BILSTEIN product, in order to prevent **serious bodily injury or death.**

Any attempt to misuse, misapply, modify, or tamper with any BILSTEIN suspension product voids any warranty and **may result in serious bodily injury or death.**

While installing any BILSTEIN product:

- Do not use impact tools for loosening or tightening fasteners, because this may destroy the screw threads.
- Self-locking fasteners must only be used **once!**
- Reuse original equipment components only if they are in good condition, otherwise replace them with new components.
- Never remove the slight film of oil on the piston rod and seal.
- All mounting fasteners for shocks and struts must be securely tightened before tension is placed on the suspension system.

After installing any BILSTEIN product:


- The suspension caster and camber must be checked and/or adjusted to comply with the vehicle manufacturer's specifications.
- The (load dependent) brake compensator and the anti-lock brake system must be checked and/or reset to comply with the vehicle manufacturer's specifications.
- The headlight aim must be checked and adjusted.

# E4-WM5-Y515A00 MOUNTING INSTRUCTION



**Installation Instructions: Warning! Coil springs under high pre-load force!!!**

1. Prior to installation, read instructions thoroughly and inspect the items within the kit.
2. Take vehicle ride height measurements on a level surface prior to disassembly.
3. Support vehicle on a chassis hoist or make sure the vehicle is on a safe/solid working surface with the emergency brake engaged. Block the rear wheels for added safety. **Do not lift the front wheels off the ground.**
4. Disconnect the front track bar at the frame, driver's side, carefully allowing it to rest on the tie rod assembly below. See Figures 1 and 2 below.

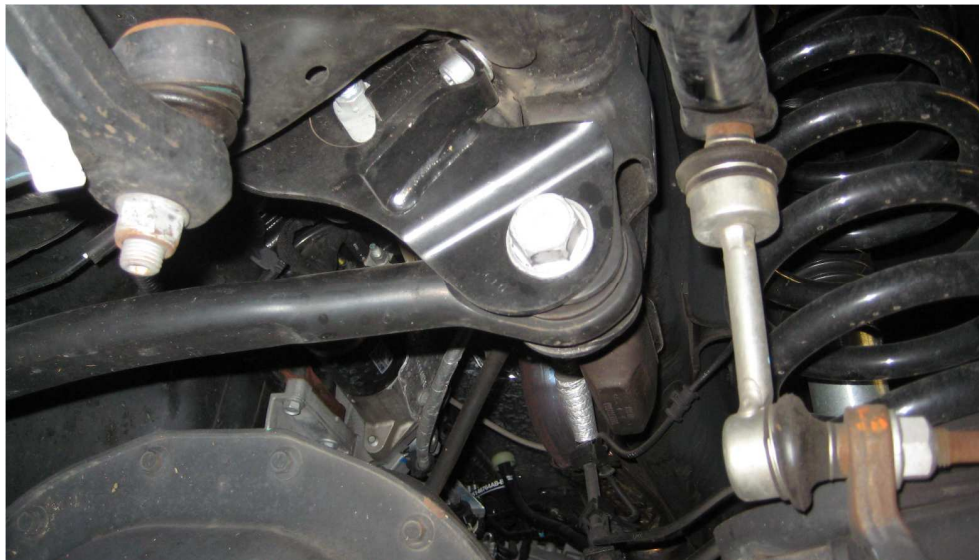

**Figure 1**



**Figure 2**

# E4-WM5-Y515A00 MOUNTING INSTRUCTION



The following steps should be performed on both sides of the vehicle:

5. Disconnect the upper sway bar end links and move sway bar off the mounts. See Figure 2 on page 2.
6. Disconnect and remove the upper and lower shock mounts and remove shocks from vehicle.
7. Slowly and carefully raise the vehicle, by the frame, just enough to allow springs to be removed. Remove springs and upper rubber spring isolators. See Figure 3 below.



**Figure 3. Passenger side**

8. Install the BILSTEIN provided upper spring isolator part # E4-XK4-Z022A00 in same position the OE upper rubber isolator was in. Insert the threaded stem into the hole in the frame and thread on the BILSTEIN provided locknut part # E4-MU2-Z035A00. Temporarily hand tighten.
9. Carefully raise the vehicle enough to install the BILSTEIN provided coil springs, using caution to prevent damage to any of the ABS/brake lines. **Install BILSTEIN provided coil springs part # E4-FD1-Y488B00 so the BILSTEIN label is upright and legible. The coil springs have different upper and lower end gaps and need to be installed in this orientation only!** Verify the coil spring is clocked properly in the indexed upper isolator. The spring should be centered on the lower spring seat on the axle. See Figures 4-7 on pages 4-5.



E4-WM5-Y515A00  
MOUNTING INSTRUCTION



**Figure 4. Passenger side  
(pictured with 5112 kit)**



**Figure 5. Passenger side  
(pictured with 5112 kit)**

E4-WM5-Y515A00  
MOUNTING INSTRUCTION



**Figure 6. Driver side  
(pictured with 5112 kit)**



**Figure 7. Driver side  
(pictured with 5112 kit)**

# E4-WM5-Y515A00

## MOUNTING INSTRUCTION



10. Slowly lower the vehicle onto the coil spring/isolator.
11. With the weight of the vehicle completely on the coil spring/isolator, tighten the locknut fastening the isolator to the frame. Torque to 25Nm (18 ft-lbs).
12. Reconnect sway bar end links and torque to service manual specifications.
13. Reattach and torque track bar hardware at the frame. Torque to service manual specifications.
14. Install new BILSTEIN shocks using the installation instructions provided in the shock box.
15. Align the vehicle to factory specifications and have any adjustments performed by a certified technician. This completes the installation.