


S6108

04.5-07 DODGE 2500/3500 "600/610" 5.9L
CUMMINS, CAT BACK, 4" SINGLE SIDE

MBRP

INC.

PERFORMANCE EXHAUST

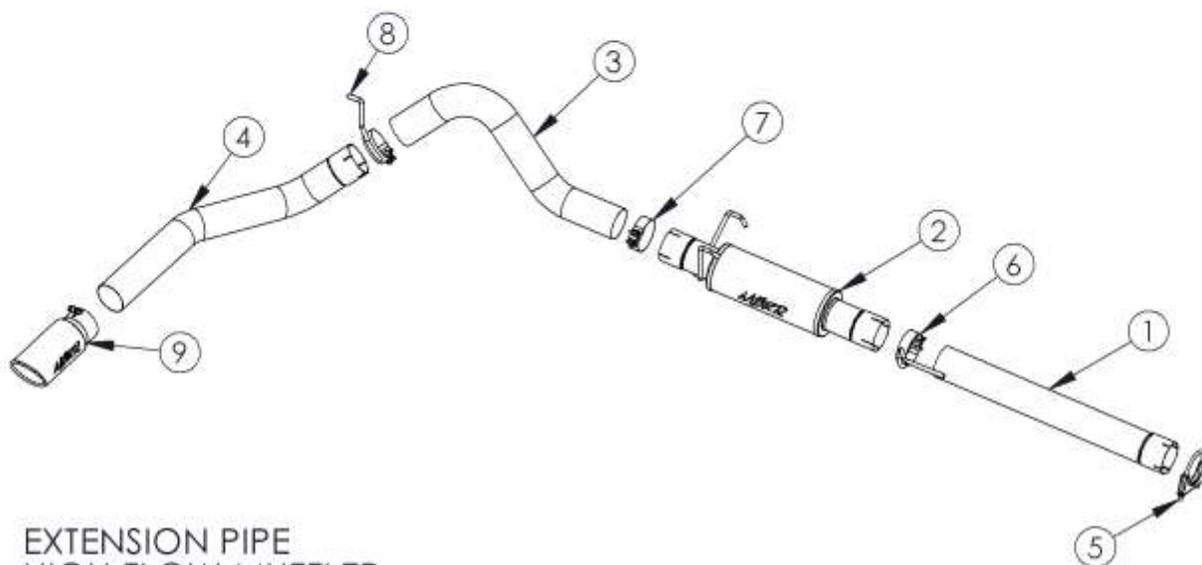

1. EXTENSION PIPE
2. HIGH FLOW MUFFLER
3. OVER AXLE PIPE
4. TAIL PIPE
5. 4" CLAMP
6. HANGER BAND CLAMP
7. 4" BAND CLAMP
8. HANGER BAND CLAMP
9. EXHAUST TIP

*NOTE: MUFFLER MAY NOT BE EXACTLY AS SHOWN

PLEASE READ BEFORE STARTING INSTALATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove the exhaust system from the rubber insulators and remove all of the clamps from the catalytic converter back.
3. Separate the slip joint behind the muffler and remove the tail pipe. Next, separate the slip joint located behind the catalytic converter and remove the muffler and extension pipe.

Installation of MBRP Inc. Performance Exhaust:

1. Install the **Extension Pipe** onto the catalytic converter. The **Extension Pipe** will require cutting to accommodate vehicles other than the Quad Cab long bed or Mega Cab truck.
(**Installation tip:** Temporarily hang the muffler in place using the three OEM rubber hangers and measure from the muffler to the catalytic converter to determine the length required.)
2. Install the **Muffler** hangers into the two OEM rubber insulators located above the outlet of the **Muffler**. **Refer to Figure 5.**
3. Install the **Hanger Band Clamp** onto the **Tail Pipe** and then install the **Tail Pipe** onto the **Over Axle Pipe**. Install the assembly from the rear of the truck, over the axle and attach to the outlet of the **Muffler**. Finish hanging the **Tail Pipe** by reattaching the rubber insulator.
4. Install the provided **Clamps** around pipes where needed. Adjust the **Tail Pipe** and check along the whole length of the exhaust system to ensure there is adequate clearance around the fuel and brake lines or any wiring. If any interference is detected relocate or adjust. Start at the front of the exhaust system and begin tightening all connections
5. Install and adjust the **Tip** to suit. Tighten lock bolt located on the **Tip**.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. performance exhaust system. We hope you enjoy your purchase.