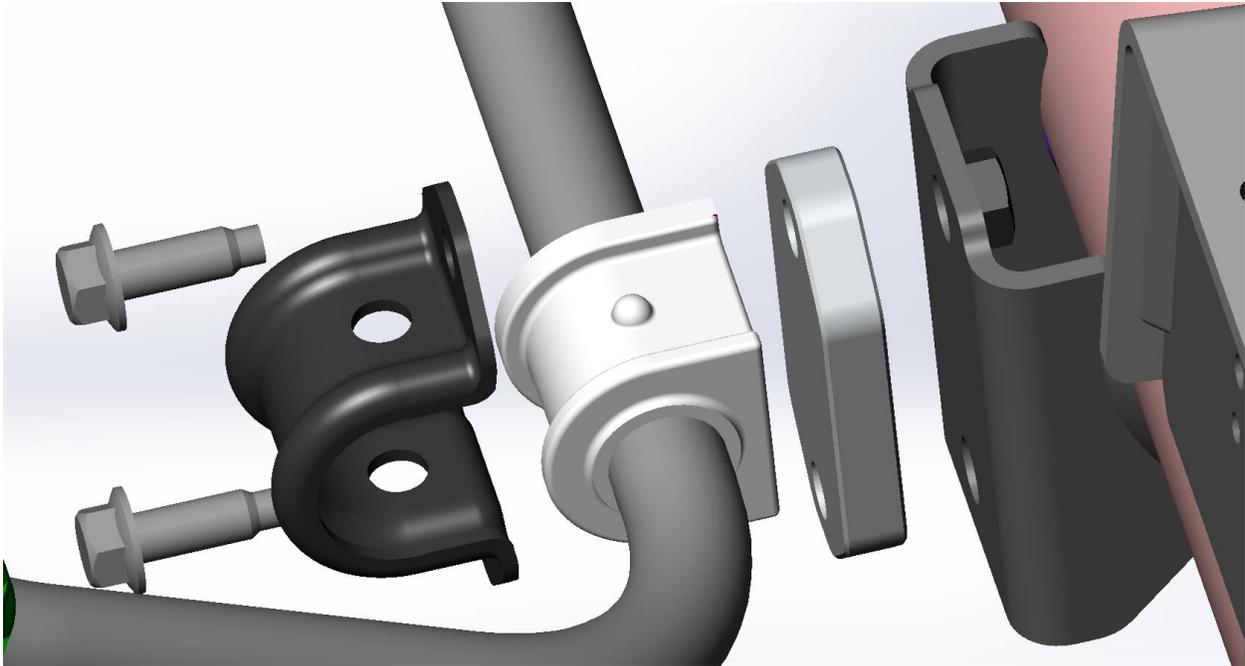




*DOWNLOAD ENHANCED
INSTALL MANUALS AT
dieselperformance.com*



DODGE REAR SWAY BAR SPACER

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION

KIT CONTENTS:

Please check to make sure that you have all the parts listed in this kit **before** you start the disassembly of your truck.

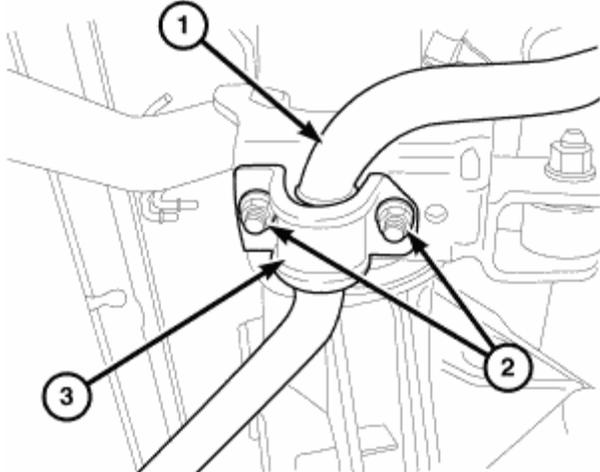
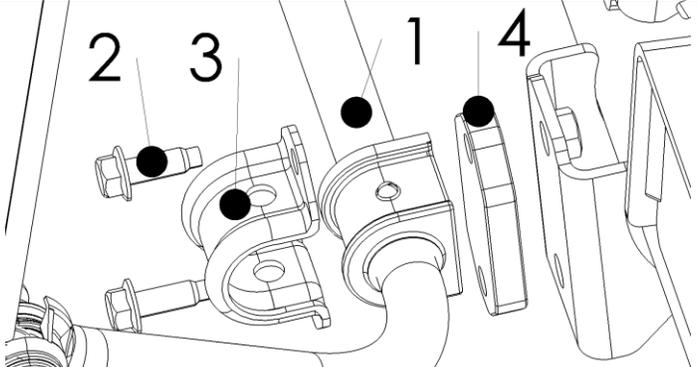
BD Engine Brake Inc.

Plant Address: 33541 MacLure Rd. Abbotsford, BC, Canada V2S 7W2

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295
Phone: 604-853-6096 | Fax: 604-853-8749 | Internet: www.dieselperformance.com

1601836	FT-11115682
	
<p><i>Spacer</i></p>	<p><i>Mounting Bolt</i></p>
<p>Qty: 2</p>	<p>Qty: 4</p>

This aluminum spacer when installed will allow sufficient clearance between the #1601825 Differential Cover and the rear sway bar.

<p>1. Position vehicle on a hoist on neutral position.</p> <p>2. Remove rear sway bar bushing retainer bolts (2).</p> <p>3. Remove the Bushing retainer (3)</p> <p>4. Remove the sway bar (1).</p> <p><i>Caution some parts maybe loaded and can shift when removing.</i></p>	
<p>5. Install the stabilizer bar (1) to the vehicle by placing spacer (4) and install the bushing retainer (3) to the axle. Tighten the bolts (2) to 135 Nm (100 ftlbs). Repeat process for both passenger and driver side.</p>	

BD Engine Brake Inc.

Plant Address: 33541 MacLure Rd. Abbotsford, BC, Canada V2S 7W2

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 | Fax: 604-853-8749 | Internet: www.dieselpower.com