



Sway Bar End Link Kit Installation Instructions

WARNING! Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the parts or your vehicle.

1. Remove the old sway bar end links, now insert the stud end of the gold clevis into the hole in the lower control arm.
2. Next instal larger bushing end into gold clevis using supplied 1/2" hardware. Then twist the clevis until the hole in your sway bar aligns with threaded end of your new end link.
3. Once you have proper alignment on each end of the end link you may now instal and torque the large 5/8" nut on the clevis stud bottom of the lower control arm to 70 ft/lbs.
4. Now instal the top bushings, using the 2 gold flat washers and the smaller 7/16" hex bolt, be sure to use ample loctite on the threads of this top bolt. Tighten down just until the bushings start to expand. This will allow movement.
5. At this time you can tighten the 1/2" lower clevis hardware to 60 ft/lbs.


* See pictures on back side



A. Clevis in lower control arm.



B. End Link in place, clevis rotated so bushing is relaxed.

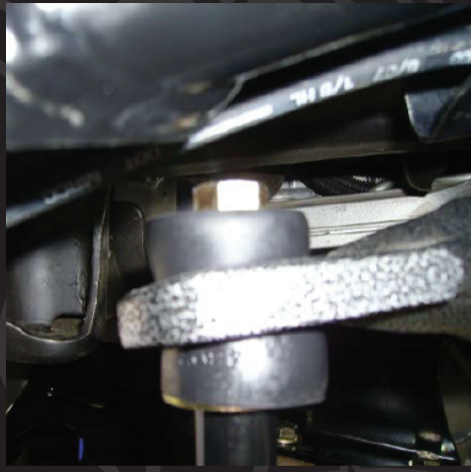

C. Bushings swell slightly when tightened properly, Do not over tighten!